

 
B.E.G. LUXOMATIC L1

Installation and Operating Instruction for **B.E.G.** - circular lamp L1

1. Mounting preparations

Work on the 230 V mains supply may only be carried out by qualified professionals or by instructed persons under the direction and supervision of qualified skilled electrical personnel in accordance with electrotechnical regulations.

Disconnect supply before installing!



6. Technical data

Mounting:

230 V~ ±10 % Power supply: Protection / class: Ambient temperature: Housing: Lamps:


IP40 / II / **C €**-15°C to +30°C
Diffuser: glass
max. 60 W – incandescent lamp or energy saving lamp E27

wall or ceiling installation

C Declaration of Conformity: The product complies with the low voltage recommendation 2006/95/EC and the EMV recommendation 2004/108/EC.

2. Installation

For device installation, the in-house mains fuse must be removed.

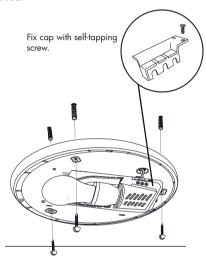

Open the lamp by lightly turning the glass anti-clockwise. Lead the mains cable on the back of the lamp through the rubber bushing. Mark drill holes on the ceiling or wall. Drill suitable holes and push the plugs tightly into the holes. Screw on the lamp.


For wall mounting, please note: The lamp must be installed horizontally!

3. Connections

Connect power supply as indicated in the terminal connection:

Phase = LNeutral conductor = N

6. Article / Part nr.

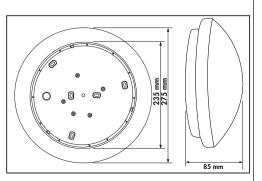

6. Article / Part nr. / Accessories

Туре	Part nr.
L1 – Glass silk-matt	94453

Accessory

O-ring 37849

